

Before beginning installation, check for any damage that may have occurred during transport. **Note: Damage claims cannot be made during or** after installation.

To read all warnings, care, and maintenance information.

۲

For ease of installation you will need:
To read the installation instructions completely before beginning.

Teflon Tape Allen Wrench

Tools You Will Need

Screwdriver

Adjustable Wrench

0



17-35 Taos Wall Bracket with Outlet


Cossuate

LONDON

Installation Instructions

|--|

17-35

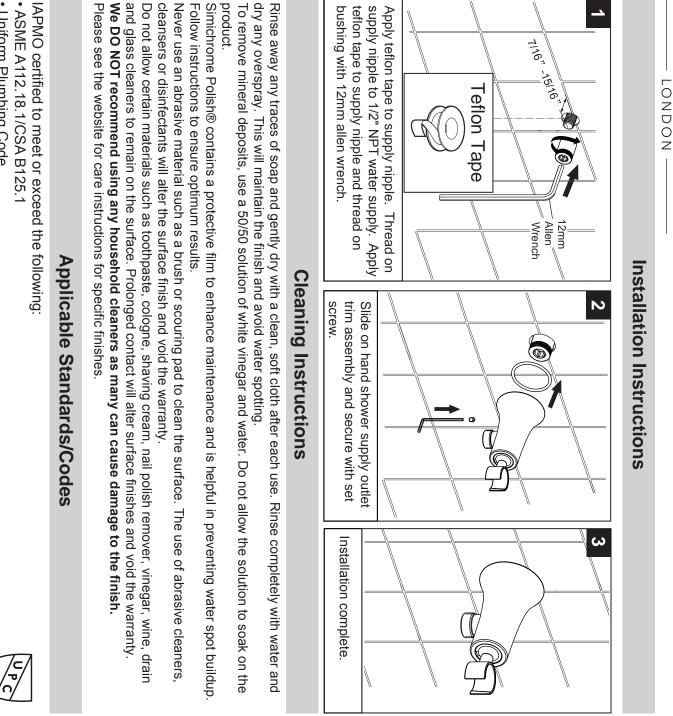

- Uniform Plumbing Code
- National Plumbing Code of Canada

0

2-1/4"

Installation Dimensions

