

## Drilling Instructions


### Step 1. Attach Numbers to Plaque

Based on the number of numerals in your address, drill through the appropriate pre-punched holes using supplied drill bit. (see chart at right) Attach numbers to plaque with supplied screws.

If numbers are attached to plaque, skip to step 2.




If you have  
**One Numeral**  
in your address

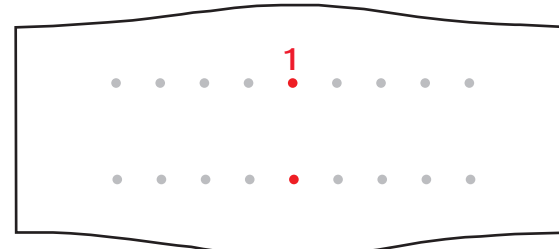


Drill holes marked  
**1**  
ONLY

If you have  
**Two Numerals**  
in your address

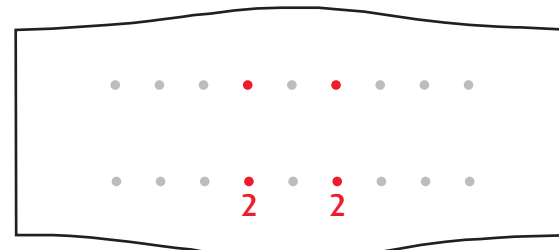


Drill holes marked  
**2**  
ONLY

If you have  
**Three Numerals**  
in your address

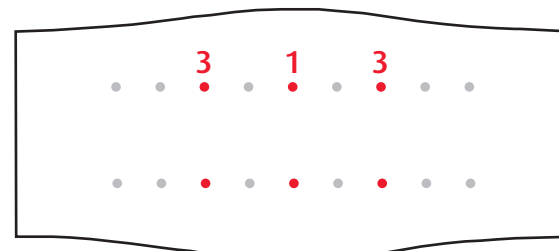


Drill holes marked  
**1 and 3**  
ONLY

If you have  
**Four Numerals**  
in your address

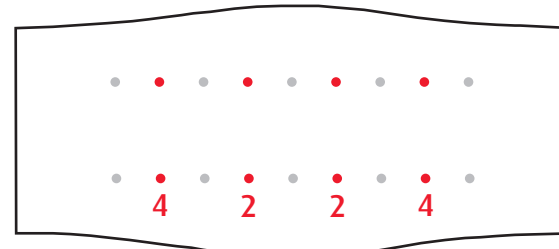

Drill holes marked  
**2 and 4**  
ONLY

If you have  
**Five Numerals**  
in your address

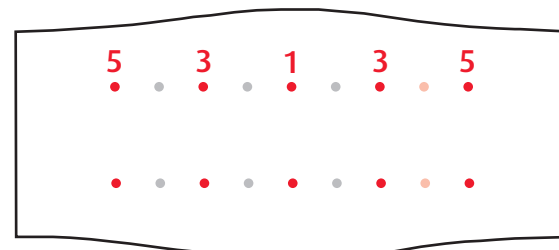

Drill holes marked  
**1, 3, and 5**  
ONLY

### Step 2. Mount Plaque to Wall

Select location on wall. Level mounting template and tape to wall. **Drill pilot holes through drill targets.** Screw mounting screws into wall, leaving approximately 1/4" exposed. Hang plaque on wall. If desired, apply GE Clear Silicon II to back of plaque for permanent installation.

