
RW ATLAS Two Hole Kitchen Mixer with Spray

INSTALLATION GUIDELINES

Side Mounted Metal Lever Handles **Style No.** RWKM10

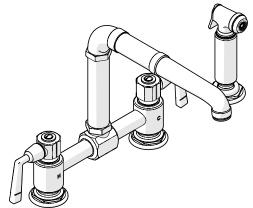

SPECIFICATIONS:

Fitting Hole Diameter: 1-3/8" Handle Spread: 8" [NOT ADJUSTABLE] Inlet Connection Size: 3/8" Inlet Connection Type: Female Straight Maximum Deck Thickness: 1-1/2" Minimum Deck Thickness: 1/4" Recommended Water Pressure: 45psi Spout Reach: 10" Spout Swivel: Yes

IMPORTANT:


- NOTE: The screws on the top of the handles are aesthetic and do not serve any mechanical purpose and should not be removed.
- > To ensure this product is installed properly, you must read and follow these guidelines.
- > The owner/user of this product must keep this information for future reference.
- Be sure your installation conforms to federal state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- > This product must be installed by a professional licensed contractor.
- Product should be on-site prior to rough-in. This allows the installer to visualize the installation and verify the center spread.
- Inspect this product to ensure you have all the parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- > DO NOT use putty on deck fittings. Upper and lower washers are provided.

These guidelines have been prepared for the professional contractor to aid in the installation of: <u>RW ATLAS TWO HOLE KITCHEN MIXER WITH SIDE MOUNT LEVER HANDLES AND SPRAY</u> (STYLE # RWKM10). All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications. SEE SERVICE PART DOCUMENT FOR PART ORDERING, AVAILABLE ON WATERWORKS.COM

SPOUT INSTALLATION:

- See Figure 1. for Steps 1-3.
- 1. Remove the rubber washer, plastic washer & nut from both of the spout assembly's threaded shanks. Note: The inlet tube may need to be unthreaded and removed in order to remove nut.
- 2. Place the spout assembly through both holes in the deck, along with the supply hoses and spray outlet hose.
- 3. Re-install rubber washer, plastic washer and nut from under the deck. Tighten the nut up against the bottom of the mounting surface to secure the spout assembly.

Figure - 01

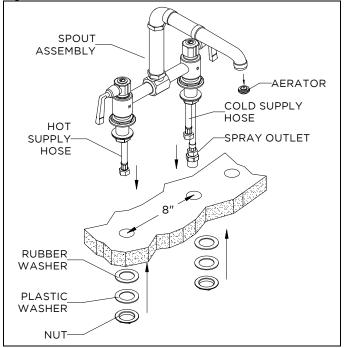

SIDE SPRAY INSTALLATION:

- See Figure 2. for Steps 4-10.
- 4. Remove the nut and rubber washer from the bottom of the threaded tube. Unthread the retaining collar from the top of the threaded tube and remove the plastic sleeve.
- 5. Loosen the hex collar and insert the threaded tube along with the escutcheon and hex collar into the hole in the deck, making sure the o-ring is between the escutcheon and the deck.
- 6. Re-attach the rubber washer and nut to the threaded tube from under the deck.

WATERWORKS

RW ATLAS

Two Hole Kitchen Mixer with Spray

INSTALLATION GUIDELINES

