
ARUNDEL SCONCE & PENDANT

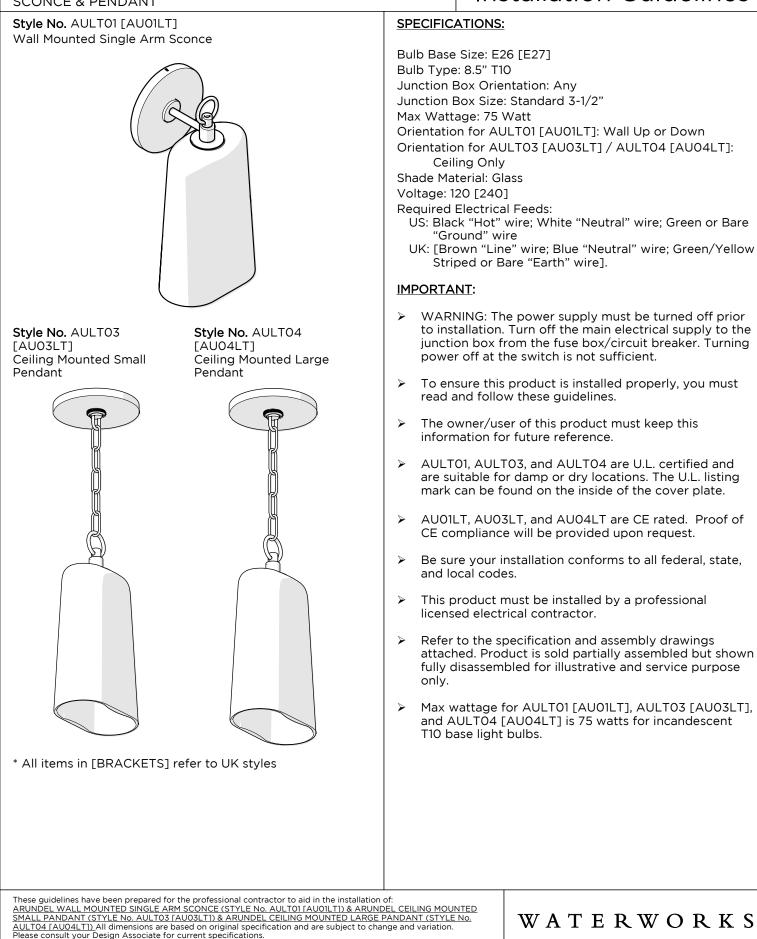

7.29.2016

Installation Guidelines

ARUNDEL **SCONCE & PENDANT**

SCONCE INSTALLATION:

- REQUIRED: Install a 3-1/2" octagonal electrical junction \triangleright box at the desired height.
- See Figure 01 for Steps 1 2. \geq

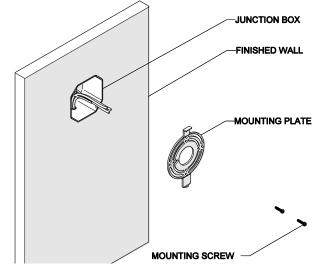


FIGURE - 01

- Remove the MOUNTING PLATE by unthreading the SET 1. SCREW from the back plate.
- 2. Pull the wires in the junction box through the center hole of the MOUNTING PLATE. Attach the MOUNTING PLATE to the JUNCTION BOX using the MOUNTING SCREWS making sure to keep the proper alignment of the plate.
- See Figure 02 for Steps 3 6.



- 3. Fasten the bare copper fixture wire to the green or bare copper wire in the box with a wire nut or fasten it to the MOUNTING PLATE with the ground screw provided.
- 4. Fasten the white fixture wire to the white wire in the box with a wire nut. Tightly wrap the connection with electrical tape beginning 1" [25mm] below the wire nut to ensure the tape seals the end of the nut. Make sure that there are no exposed wires that could cause a short circuit.
- 5. Repeat previous step with the black fixture wire and the black wire from the junction box. Make sure the wires are pushed into the junction box.
- 6. Attach the LIGHT ASSEMBLY to the MOUNTING PLATE on the wall by reinstalling the SET SCREW.


PENDANT INSTALLATION:

- REQUIRED: Install a 3-1/2" octagonal electrical junction box at the desired location.
- See Figure 03 for Steps 6 7.




FIGURE - 03

- 7. To adjust the CHAIN to the desired height, spread open a link and remove excess links until the desired height is achieved.
- 8. Reinstall the links at desired height and cut any excess wire.

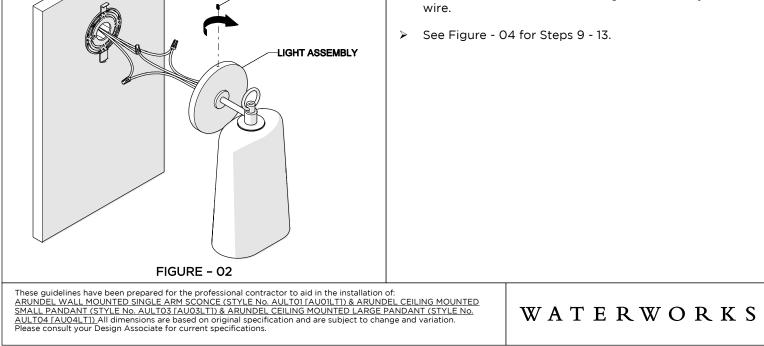


SET SCREW

ARUNDEL SCONCE & PENDANT

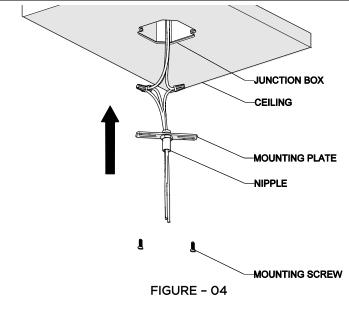

- 9. Pull the wires from the light through the center of the MOUNTING PLATE.
- 10. Fasten the bare copper fixture wire to the green or bare copper wire in the box with a wire nut or fasten it to the MOUNTING PLATE with the ground screw provided.
- 11. Fasten the white fixture wire to the white wire in the box with a wire nut. Tightly wrap the connection with electrical tape beginning 1" [25mm] below the wire nut to ensure the tape seals the end of the nut. Make sure that there are no exposed wires that could cause a short circuit.
- 12. Repeat previous step with the black fixture wire and the black wire from the junction box. Make sure the wires are pushed into the junction box.
- 13. Attach the MOUNTING PLATE to the JUNCTION BOX using the MOUNTING SCREWS making sure to keep the proper alignment of the plate.
- See Figure 05 for Step 14.

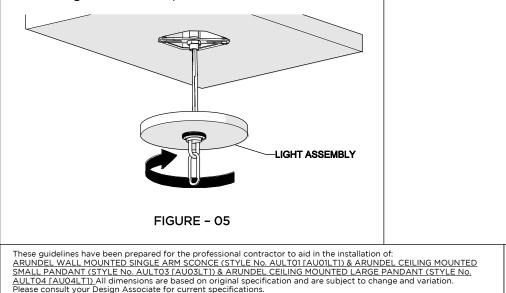

Installation Guidelines

14. Thread the LIGHT ASSEMBLY to the NIPPLE on the MOUNTING PLATE making sure it's secure.

SERVISING THE LIGHT:

- > See Figure 06 and 07 for Step 15.
- 15. Unscrew the BULB and the HOLDER to gain access to the SHADE for cleaning and servicing.
- If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-6pm EST).

