


Style No. FMKM10†

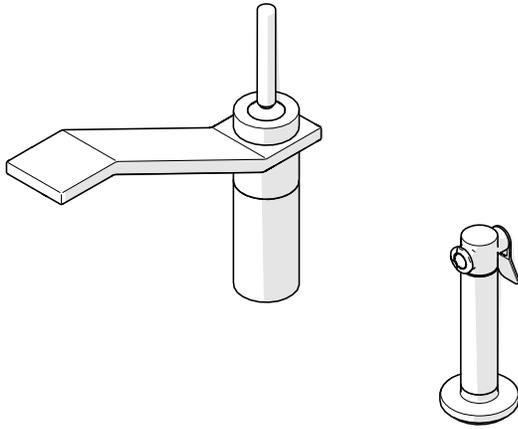

SPECIFICATIONS:

Deck Thickness:	1/4" MIN - 1-1/4" MAX (6mm MIN - 32mm MAX)
Fitting Hole Diameter	Ø1-3/8" (Ø 35mm)
Inlet/Outlet Connection Size & Type:	3/8" Compression Connection Hoses†
Restricted Maximum Flow Rate:	2.2gpm (8.32 L/min)
Spout Reach:	8-11/16" (221mm)
Spout Swivel:	Yes
Water Pressure:	20 psi MIN - 80psi MAX (1.4 Bar Min - 5.5 Bar Max)
Water Pressure Recommended:	45 psi (3 Bar)

† UK Style No. **FM10KM** is supplied with 2 **BSP** Adapters, assembly required.

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- Be sure your installation conforms to federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- This product must be installed by a professional licensed contractor.
- Inspect this product to ensure you have all the parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- The use of certain putty may stain stone or tile surfaces. Upper and lower washers are provided.

SPOUT INSTALLATION:

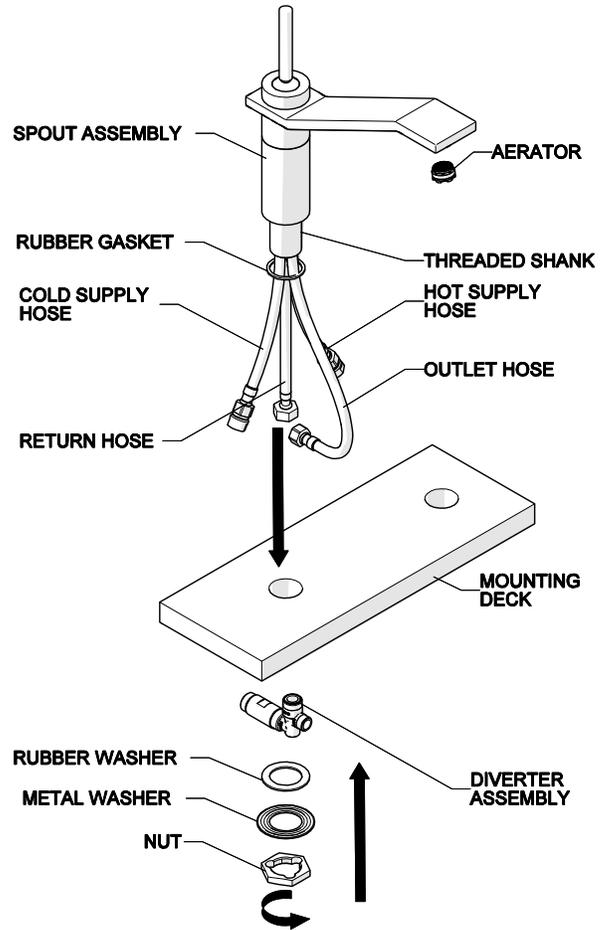


FIGURE - 01

- See Figure 1 & 2. for Steps 1-5.
1. Remove the NUT, METAL WASHER, RUBBER WASHER from the bottom of the THREADED SHANK.
 2. Unthread DIVERTER ASSEMBLY from OUTLET HOSE & RETURN HOSE.
 3. Insert the SPOUT ASSEMBLY with the SUPPLY HOSES, OUTLET HOSE, RETURN HOSE & THREADED SHANK through the hole on the mounting surface making sure the RUBBER GASKET is underneath the spout.
 4. Re-install the RUBBER WASHER, METAL WASHER & NUT (in that order). Tighten the NUT to secure the spout.
 5. Attach the RETURN HOSE to the 1/2" port on the DIVERTER ASSEMBLY. Attach OUTLET HOSE to the 3/8" port on the DIVERTER ASSEMBLY. See Figure - 02.

These guidelines have been prepared for the professional contractor to aid in the installation of: **FORMWORK SINGLE HOLE KITCHEN FAUCET WITH SPRAY**
STYLE NOS. FMKM10 & FM10KM (UK).
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.

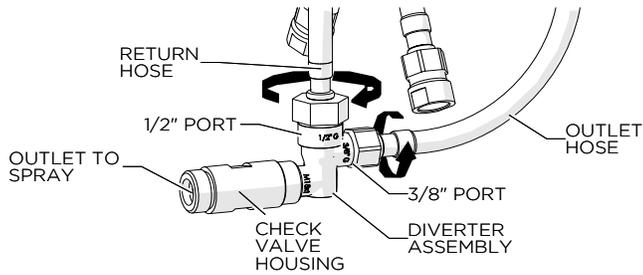


FIGURE - 02

SIDE SPRAY INSTALLATION:

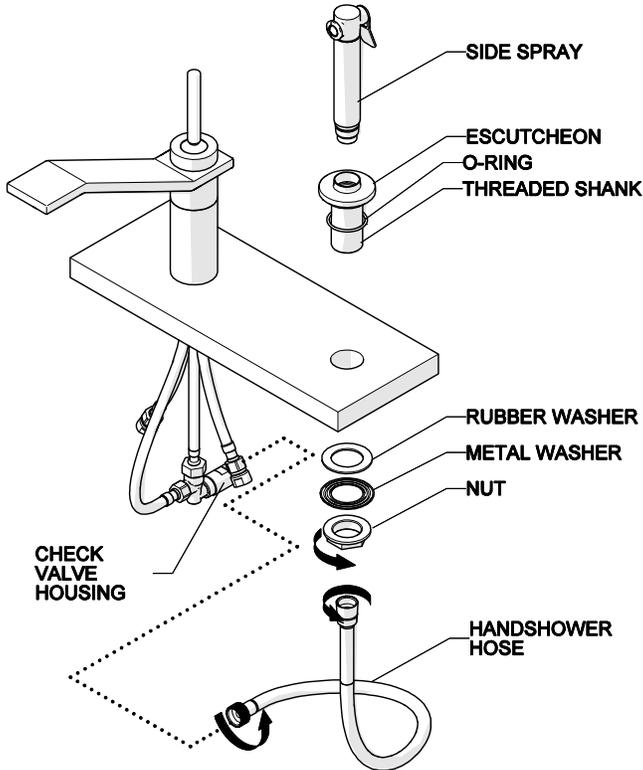


FIGURE - 03

- See Figure 3. for Steps 6-10.
- 6. Remove the NUT, METAL WASHER & RUBBER WASHER from bottom of THREADED SHANK
- 7. Insert the ESCUTCHEON with THREADED SHANK into the hole in the deck, making sure the O-RING is underneath.
- 8. Reattach the RUBBER WASHER, METAL WASHER, & NUT to the THREADED SHANK.
- 9. Connect the conical end of the HANDSHOWER HOSE to the SIDE SPRAY. Pass the knurled end of the HANDSHOWER hose through the ESCUTCHEON and underneath the deck.

- 10. Connect the knurled end of the HANDSHOWER HOSE to the CHECK VALVE HOUSING.

INSPECT THE INSTALLATION:

- 11. Remove the flow restricting AERATOR using the tool provided, then carefully open the hot and cold valves to flush out any debris in the supply lines. See Figure 1.
- 12. Inspect all connections for leaks.
- 13. Re-install the flow restricting aerator.

SERVICE THE CARTRIDGE:

- See Figure 4 for steps 14& 15.
- 14. Remove the SET SCREW from the back of the joystick HANDLE. Unthread the COVER, and lift handle to remove COVER, PLASTIC WASHER & HANDLE.
- 15. Unthread RETAINING COLLAR to remove CARTRIDGE from SPOUT ASSEMBLY.

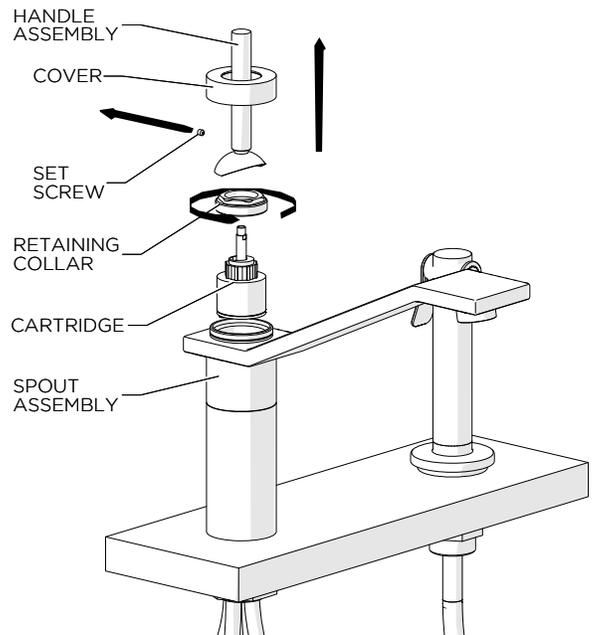


FIGURE - 04

- If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-6pm EST).
- See service part document for parts ordering, available on WATERWORKS.COM.
- * Putty contains oils and can cause permanent discoloration on certain materials such as marble, granite and any porous surface.
- † BSP Adapter can be ordered separately:
(2x) **STYLE No. UNUK08**
ITEM No. 45-23699-89112

These guidelines have been prepared for the professional contractor to aid in the installation of:
FORMWORK SINGLE HOLE KITCHEN FAUCET WITH SPRAY
STYLE NOS. FMKM10 & FM10KM (UK).
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.