
Installation Guidelines



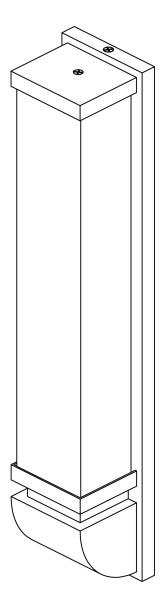

* All items in [brackets] refer to CE styles

SPECIFICATIONS:

Outlet Box Orientation: vertical Outlet Box: Standard gem box Outlet Box Size for RLLT02 [RL02LT]: Standard 3-1/4". Orientation for RLLT02 [RL02LT]: Wall Only Shade Material: Glass Voltage: 120 [240] Required Electrical Feeds: Black "Hot" wire; White "Neutral" wire; Green or Bare "Ground" wire [Brown "Line" wire; Blue "Neutral" wire; Green/Yellow Striped or Bare "Earth" wire]

These guidelines have been prepared for the professional contractor to aid in the installation of: <u>RALEIGH WALL MOUNTED BAR SCONCE (STYLE# RLLT02 / [RL02LT])</u> All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

- WARNING: The power supply must be turned off prior to installation. Turn off the main electrical supply to the outlet box from the fuse box/circuit breaker. Turning power off at the switch is not sufficient.
- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- RLLT02 is ETL certified and suitable for damp or dry locations. The ETL listing mark can be found on the inside of the cover plate.
- RL02LT is CE rated. Proof of CE compliance will be provided upon request.
- Be sure your installation conforms to all federal, state, and local codes.
- This product must be installed by a professional licensed electrical contractor.
- Refer to the specification and assembly drawings attached. Product is sold partially assembled but shown fully disassembled for illustrative and service purpose only.

WATERWORKS


RALEIGH SCONCE

RLLT02 [RL02LT] INSTALLATION:

- > REQUIRED: Install a Gem Box at the desired height.
- Connect the white wire from the driver to the white wire from the gem box using a wire nut. Tightly wrap the connection with electrical tape beginning 1" [25mm] below the wire nut to ensure the tape seals the end of the nut. Make sure that there are no exposed wires that could cause a short circuit.
- 2. Repeat previous step with the black wires from the driver and gem box. Make sure the driver and all wires are pushed into the gem box.
- See Figure 01 for Step 3.
- 3. Remove the MOUNTING PLATE from the CANOPY by removing 2 MOUNTING PLATE SCREWS.


Installation Guidelines

- See Figure 02 for Steps 4-7.
- 4. Using the MOUNTING HOLES on the MOUNTING PLATE as a guide, mark the wall where the 2 MOUNTING PLATE SCREWS will be installed. Drill two pilot holes in the wall and install the 2 WALL ANCHORS.
- 5. Hold the MOUNTING PLATE onto the wall and install the MOUNTING PLATE SCREWS onto the GEM BOX.
- 6. Next, install the MOUNTING PLATE onto the GEM BOX using the GEM BOX SCREWS provided. Be sure the output wires from the driver inside the GEM BOX extend through the hole in the MOUNTING PLATE.
- 7. Install the ground wire from the GEM BOX to the GROUND SCREW on the MOUNTING PLATE.

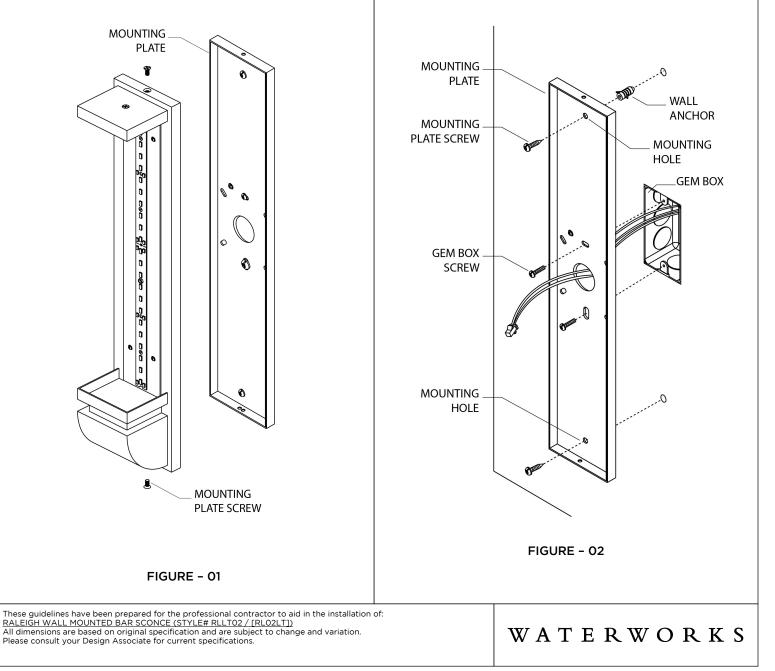

RALEIGH SCONCE

- See Figure 03 for Step 8.
- 8. Install the SHADE onto the fixture by removing the SCREW holding the SCONCE CAP. Seat the SHADE into the fixture and secure SCONCE CAP back onto fixture.

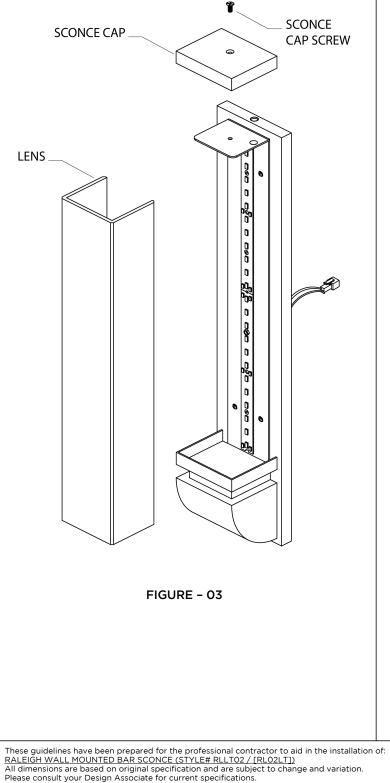

Installation Guidelines

- See Figure 04 for Steps 9-11.
- 9. Connect the PLUG CONNECTORS from the FIXTURE and DRIVER together ensuring that the locking clip engages.
- 10. Install fixture onto MOUNTING PLATE using 2 MOUNTING PLATE SCREWS.
- 11. Restore power to outlet box.

