


NOTE:

- Use plywood backing in walls whenever possible, to ensure security to wall.
- When installing towel bars, be sure that distance between center of posts is correct before drilling into wall.
- Do all painting, staining or wall papering before accessory installation.


38-0.1/0.1A/0.1B Towel Bar

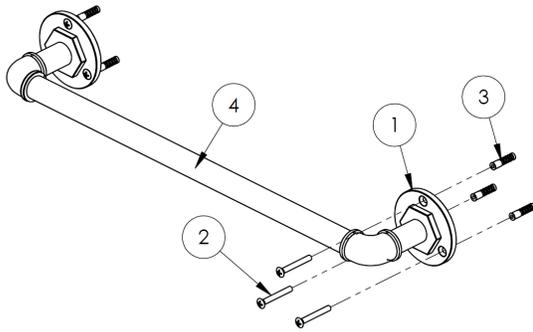

ITEM NO.	PART NUMBER	QTY.
1	38-3.1-MNTNG-FLNG	2
2	#10x1.5 WOOD SCREWS - BRASS	6
3	AF6 WALL ANCHOR	6
4	TOWEL BAR ASSY	1

- 1) Determine where you want to install the towel bar.
- 2) Place towel bar on wall at desired position and ensure that it is level.
- 3) With a pencil, mark the centers of the mounting hole positions on the Mounting Flange (1).
- 4) If using the supplied Wall Anchors (3), drill a 1/4" hole at each marked position (1 3/4" min. hole depth).
- 5) Insert anchors into holes until flush with the wall (a hammer may be needed to lightly tap the anchors flush).
- 6) Secure the Towel Bar Assembly (4) to the wall using the supplied Screws (2).


38-0.4 Paper Holder

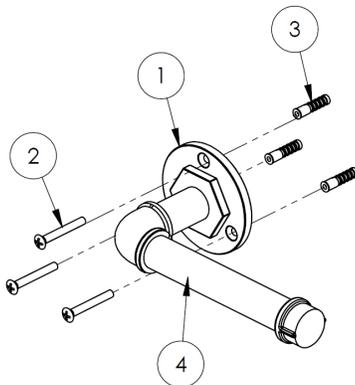

ITEM NO.	PART NUMBER	QTY.
1	38-3.1-MNTNG-FLNG	1
2	#10x1.5 WOOD SCREWS - BRASS	3
3	AF6 WALL ANCHOR	3
4	PAPER HOLDER ASSY	1

- 1) Determine where you want to install the paper holder.
- 2) Place paper holder on wall at desired position and ensure that it is level.
- 3) With a pencil, mark the centers of the mounting hole positions on the Mounting Flange (1).
- 4) If using the supplied Wall Anchors (3), drill a 1/4" hole at each marked position (1 3/4" min. hole depth).
- 5) Insert anchors into holes until flush with the wall (a hammer may be needed to lightly tap the anchors flush).
- 6) Secure the Paper Holder Assembly (4) to the wall using the supplied Screws (2).

38-0.5 Robe Hook

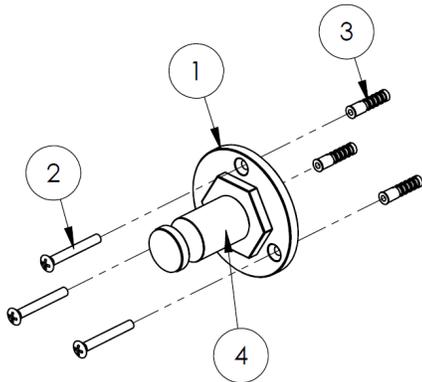

ITEM NO.	PART NUMBER	QTY.
1	38-3.1-MNTNG-FLNG	1
2	#10x1.5 WOOD SCREWS - BRASS	3
3	AF6 WALL ANCHOR	3
4	ROBE HOOK ASSY	1

- 1) Determine where you want to install the robe hook.
- 2) Place robe hook on wall at desired position and ensure that it is level.
- 3) With a pencil, mark the centers of the mounting hole positions on the Mounting Flange (1).
- 4) If using the supplied Wall Anchors (3), drill a $\frac{1}{4}$ " hole at each marked position (1 $\frac{3}{4}$ " min. hole depth).
- 5) Insert anchors into holes until flush with the wall (a hammer may be needed to lightly tap the anchors flush).
- 6) Secure the Robe Hook Assembly (4) to the wall using the supplied Screws (2).

IMPORTANT INSTALLATION INFORMATION

- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS
 - This will cause the finish to tarnish and void the warranty. A non-corrosive Alkoxy Silicone is recommended.

To help ensure the beauty of brass accessories, never install an item until construction is almost completed and after:

- Workmen have finished treating nearby tile or marble with acid or chemicals.
- The air conditioning or heat has been turned on.
- The room has been painted or stained.

For technical support or warranty information, please call 718-257-2800