
INSTALLATION GUIDELINES

WATERWORKS

THERMOSTATIC AND THREE WAY DIVERTER TRIMS

HENRY INTEGRATED THERMOSTATIC AND THREE WAY DIVERTER TRIM

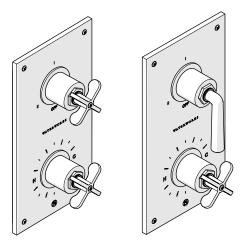

| STYLES | | |
|-----------------------|--------|--------|
| HTH501 [SHOWN] | HTH502 | HTH503 |
| HTH511 [SHOWN] | HTH512 | HTH513 |

REQUIRED PLUMBING DETAILS:

ViaWorks 1/2" Thermostatic Valve with Integrated Three Way Diverter with Shutoff Valve

STYLE No. GUTH73, GU73TH


IMPORTANT:

- > To ensure this product is installed properly, you must read and follow these guidelines.
- > The owner/user of this product must keep this information for future reference.
- > This product must be installed by a professional licensed contractor and must be onsite prior to rough-in. This allows the installer to visualize the installation.
- > ALL VALVES AND TRIMS SOLD SEPARATELY.
- This product is intended to work with the VIAWORKS 1/2" THERMOSTATIC VALVE WITH INTEGRATED THREE WAY DIVERTER WITH SHUTOFF VALVE (Style No. GUTH73, GU73TH). Refer to the Installation Guidelines provided with the VALVE for complete rough-in installation details and related information.
- Be sure your installation conforms to all federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.


- WARNING: The GUTH73, GU73TH features anti-scald protection. The risk of scalding exists until the installer has properly calibrated/adjusted the temperature setting during final TRIM installation.
- > This product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
- > Inspect this product to ensure you have all the parts required for proper installation.
- > Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- > The use of certain plumber's putty may stain stone or tile surfaces.
- If this product will remain unused for an extended period of time (over 3 months), then the water to the THERMOSTATIC VALVE should be shut off (via service stops or system control valve) and the INTEGRATED DIVERTER WITH SHUTOFF VALVE should be opened to allow the water in the THERMOSTATIC VALVE to evaporate. This is to keep the THERMOSTATIC CARTRIDGE from being exposed to stagnant or hard water, which can cause the VALVE to malfunction.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am – 6pm EST.
- > Refer to the separate Service Parts Documents for available replacement parts.

WATERWORKS

HANDLE OPERATION AND VALVE FUNCTION:

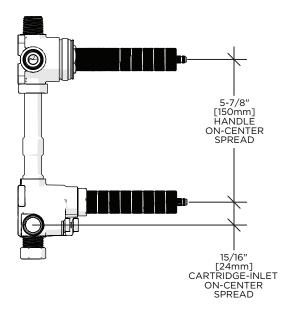


- The THERMOSTATIC VALVE only mixes hot and cold water. It does not have volume or shut-off capabilities. Mixed water flows out at a fixed volume to the INTEGRATED THREE WAY DIVERTER WITH SHUTOFF VALVE which has 6 positions, each 60° apart.
 - 3 ON positions that can direct water flow to a **MAXIMUM** of 3 devices. Water <u>CANNOT</u> flow out of the devices simultaneously (i.e. out of the shower head AND handshower together).
 - 3 OFF positions. 1 in between each ON position.
 - The INTEGRATED THREE WAY DIVERTER WITH SHUTOFF VALVE incorporates tactile feedback at each position.

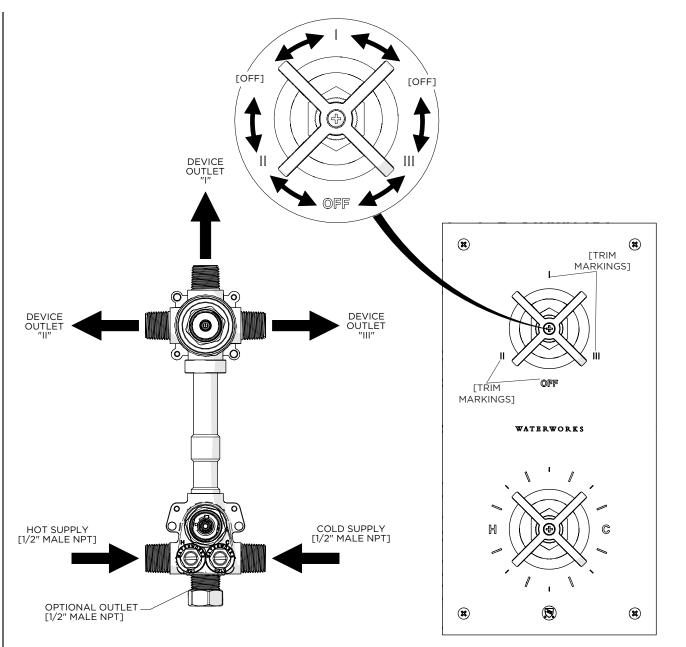


WATERWORKS

ROUGH-IN AND VALVE PREPARATION:


- The THERMOSTATIC VALVE is provided with a pre-installed FLUSH PLATE. The THERMOSTATIC CARTRIDGE, RETAINING NUT, and THREADED TUBE are packaged separately and provided with the VALVE.
- IMPORTANT: Make sure the supply lines are flushed prior to final TRIM installation using the FLUSH PLATE provided. Refer to the Installation Guidelines provided with the VALVE for further information.
- CAUTION: The rough-in depth is measured from the centerline of the inlets to the surface of the finished wall. If the VALVE is roughed-in too shallow, the TRIM cannot be installed correctly.
- Remove and discard the TILE GUARDS only when the finished wall surface (TILE or SLAB) is completed and TRIM is ready for installation.

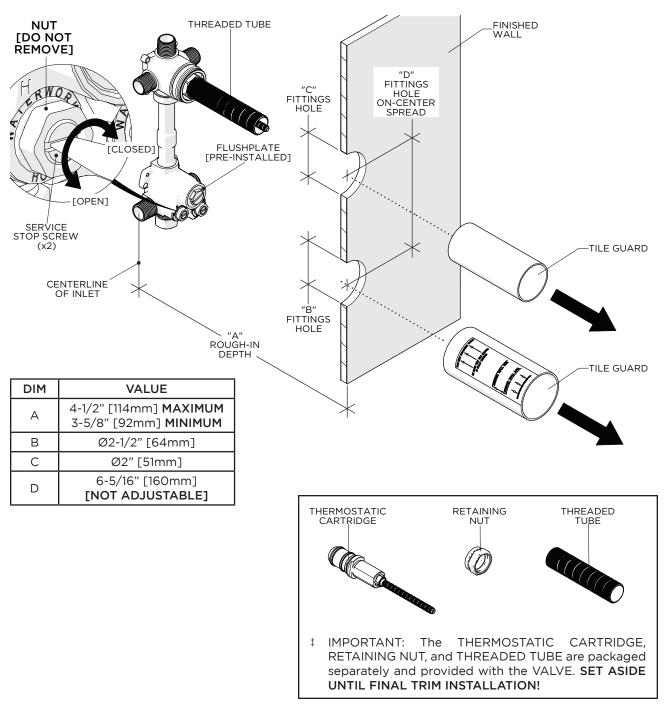


WATERWORKS

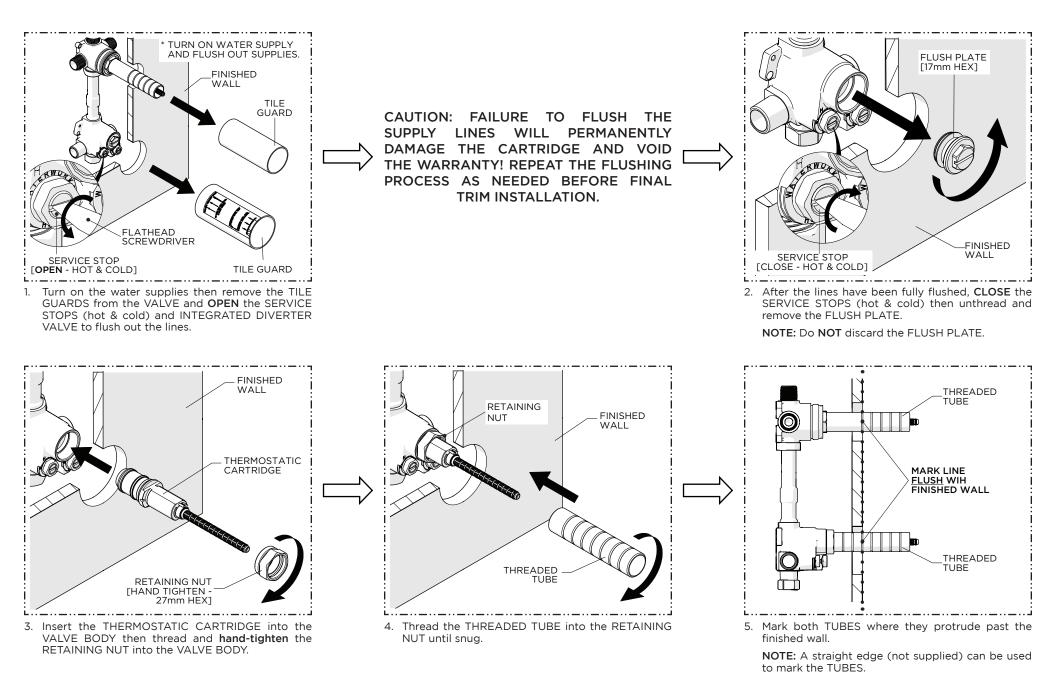

WATERWORKS

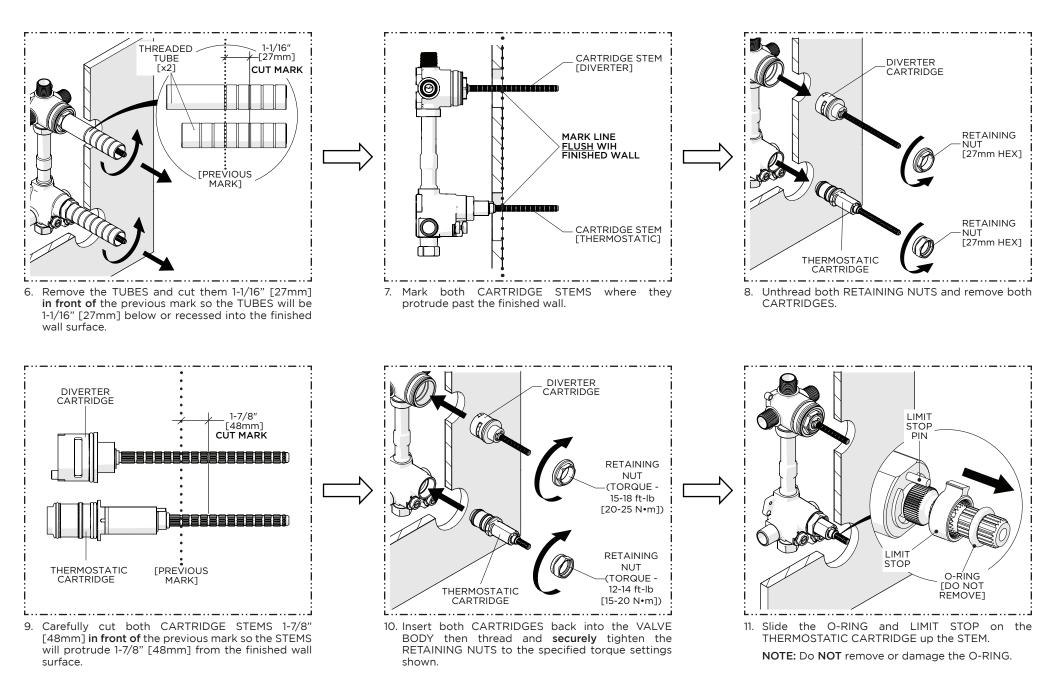

WATERWORKS

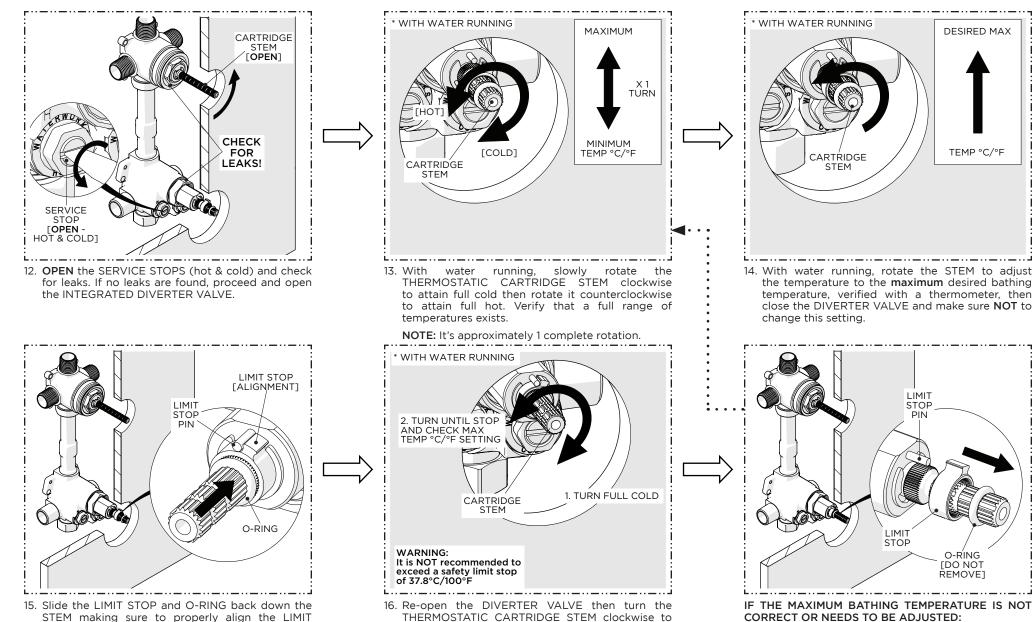

STOP with the LIMIT STOP PIN. full cold then counterclockwise until snug. Verify the maximum desired bathing temperature set in NOTE: The O-RING will prevent the LIMIT STOP the previous step then turn the water off.

> WARNING: It is NOT recommended to exceed a safety limit stop of 37.8°C/100°F.


from sliding off the STEM.


17. Slide the O-RING and LIMIT STOP back up the

16 to re-calibrate the temperature setting.

STEM to disengage and **REPEAT** steps 13 through

WATERWORKS

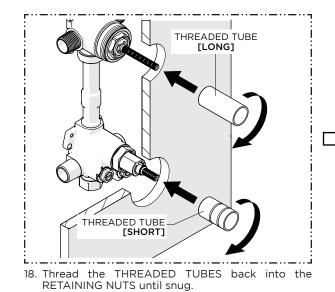

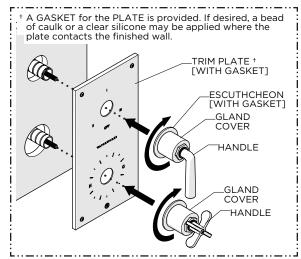

19. Firmly hold the TRIM PLATE against the finished wall then thread and securely tighten the GLAND COVERS onto the TUBES making sure to use the GASKETS provided.

NOTE: The LEVER and CROSS HANDLE positions can be swapped depending on the user preference.